



Cut on Dotted Line

Fabric Line



Cut on **blue** Dotted Line
if panel is free-standing

F

Chalk Line

**SAFETY FIRST!**

**Always wear Safety Glasses and applicable
Personal Protective Equipment during installation**

Time: 10-15 minutes (Average)

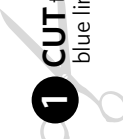
Skills: Measuring, Stapling/Screw-Driving, Cutting

Prep: Clear objects from wall area where kits will be installed.

Required Tools:

- Tape measure (Fabricmate's Measure-It Repositionable Adhesive Tape Measure recommended)
- Power Driver and 1" drywall screws or Staple Gun using 1/4" crown 7/8" leg staples
- Hold-It Stick Roll-on Adhesive
- Chalk Line
- Square-It Tool

Easy to Install:

-  **1 CUT** template along black dotted lines. If panel is free-standing also cut along blue lines so template won't show past frame edge. Fold along Corner/Fold Line.
-  **2 MEASURE** to determine location of Inside Corner on wall. Use Chalk Line if needed to span a large distance.
-  **3 USE** Hold-It Stick to attach template to wall using it as a guide. Once positioned, attach Kit Pieces to wall using Hold-It Stick, and Square-It Tool.
-  **4 STAPLE** or screw piece 2 to wall as indicated on template placing staples () every 1/2" to 1" or using 2 screws per piece. Repeat for piece 3.
-  **5 ATTACH** straight frame (F) pieces (sold separately) to wall in same manner as needed to span between installed kits.

Corner / Fold Line

Fabric Line

Chalk Line

Recommended
Staple Placement

F

2

3

F



Cut on Dotted Line



SAFETY FIRST!
Always wear Safety Glasses and applicable
Personal Protective Equipment during installation



Time: 10-15 minutes (Average)

Skills: Measuring, Stapling/Screw-Driving, Cutting

Prep: Clear objects from wall area where kits will be installed.

Required Tools:

- Tape measure (Fabricmate's Measure-It Repositionable Adhesive Tape Measure recommended)
- Power Driver and 1" drywall screws or Staple Gun using 1/4" crown 7/8" leg staples
- Hold-It Stick Roll-on Adhesive
- Chalk Line
- Square-It Tool

Easy to Install:

- 1 CUT** template along black dotted lines. If panel is free-standing also cut along blue lines so template won't show past frame edge. Fold along Corner/Fold Line.
- 2 MEASURE** to determine location of Inside Corner on wall. Use Chalk Line if needed to span a large distance.
- 3 USE** Hold-It Stick to attach template to wall using it as a guide. Once positioned, attach Kit Pieces to wall using Hold-It Stick, and Square-It Tool.
- 4 STAPLE** or screw piece 4 to wall as indicated on template placing staples () every 1/2" to 1" or using 2 screws per piece. Repeat for piece 1.
- 5 ATTACH** straight frame (F) pieces (sold separately) to wall in same manner as needed to span between installed kits.

Chalk Line



Cut on **Blue** Dotted Line
if panel is free-standing

F

Fabric Line

Corner / Fold Line

Fabric Line

Chalk Line

F

Recommended
Staple Placement

4

1

F