

SAFETY FIRST!
Always wear Safety Glasses and applicable
Personal Protective Equipment during installation

Time: 10-15 minutes (Average)

Skills: Measuring, Stapling/Screw-Driving, Cutting

Prep: Clear objects from wall area where kits will be installed.


Required Tools:

- Hold-It Stick Roll-on Adhesive
- Chalk Line
- Square-It Tool
- Tape measure (Fabricmate's Measure-It Repositionable Adhesive Tape Measure recommended)
- Power Driver and 1" drywall screws or Staple Gun using 1/4" crown 7/8" leg staples

EASY TO INSTALL:

- 1 TEMPLATE** does not need to be cut since it will be fully covered.
- 2 MEASURE** to determine location of Inside Corner Seam on wall.
Use Chalk Line if needed to span a large distance.
- 3 USE** Hold-It Stick to attach template to wall using it as a guide. Once positioned, attach Kit Pieces to wall using Hold-It Stick and Square-It Tool.
- 4 STAPLE** or screw piece 4 to wall as indicated on template placing staples (—) as shown every 1/2" to 1" or using 2 screws per piece. Repeat for piece 3.
- 5 ATTACH** straight frame (F) pieces (sold separately) to wall in same manner as needed to span between installed kits.

CORNER/FOLD LINE

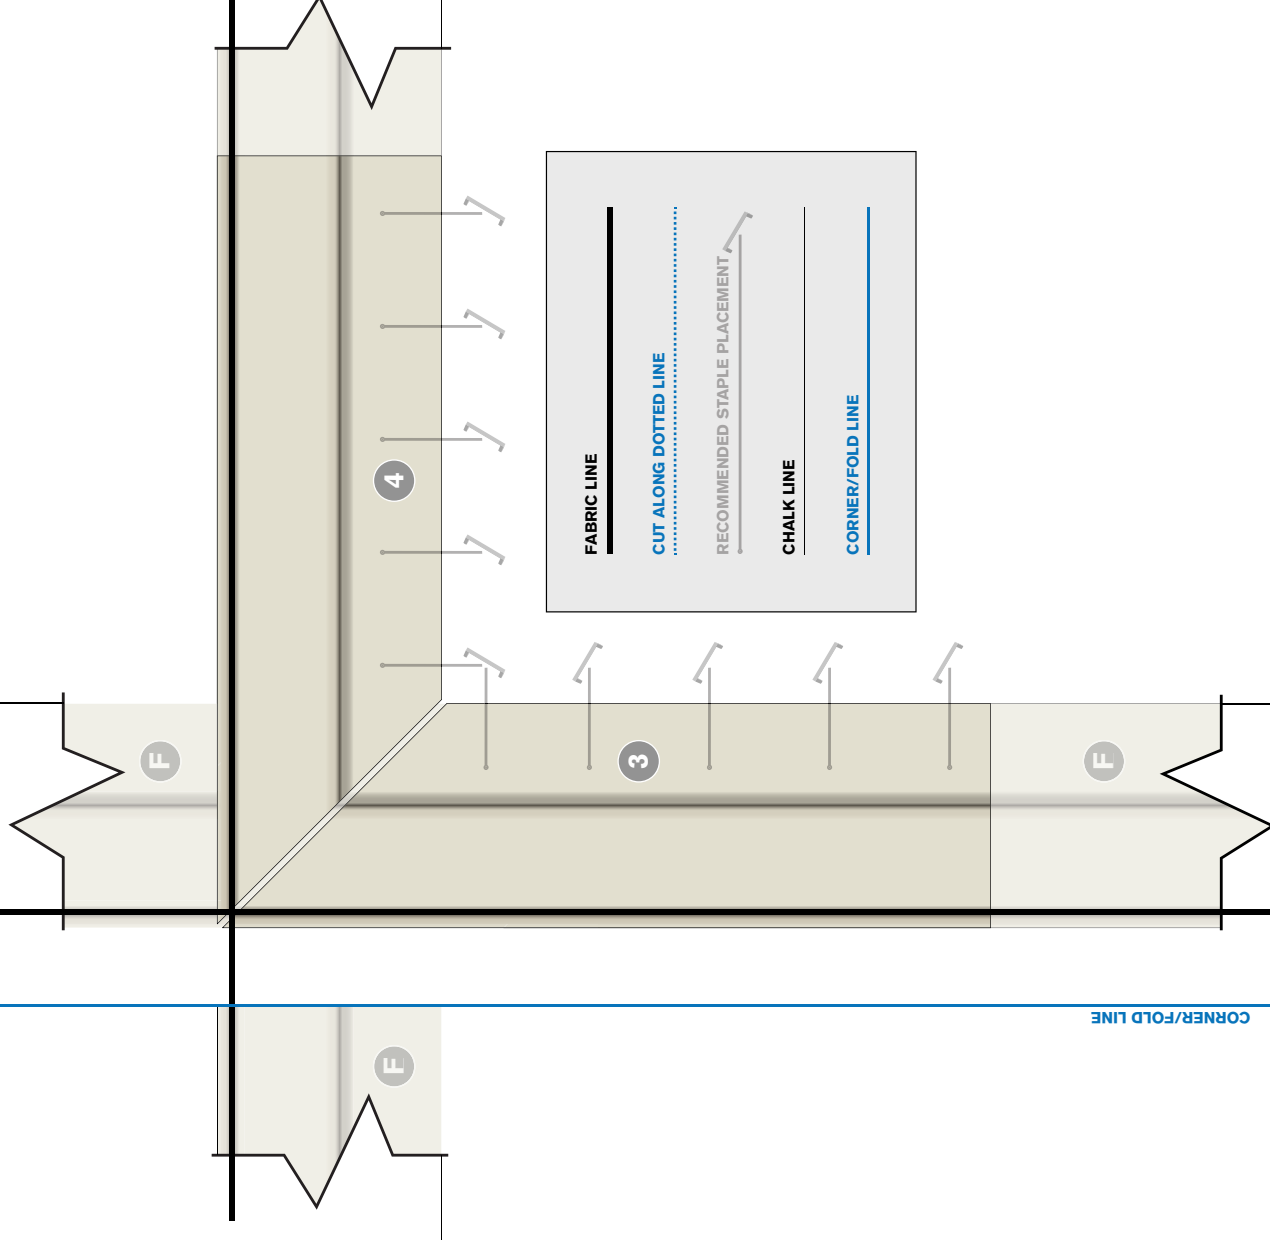

FABRIC LINE
CUT ALONG DOTTED LINE
RECOMMENDED STAPLE PLACEMENT
CHALK LINE
CORNER/FOLD LINE

SAFETY FIRST!
Always wear Safety Glasses and applicable
Personal Protective Equipment during installation

Time: 10-15 minutes (Average)

Skills: Measuring, Stapling/Screw-Driving, Cutting

Prep: Clear objects from wall area where kits will be installed.

Required Tools:

- Hold-It Stick Roll-on Adhesive
- Chalk Line
- Square-It Tool
- Tape measure (Fabricmate's Measure-It Repositionable Adhesive Tape Measure recommended)
- Power Driver and 1" drywall screws or Staple Gun using 1/4" crown 7/8" leg staples

EASY TO INSTALL:

- 1 TEMPLATE** does not need to be cut since it will be fully covered.
- 2 MEASURE** to determine location of Inside Corner Seam on wall.
use Chalk Line if needed to span a large distance.
- 3 USE** Hold-It Stick to attach template to wall using it as a guide. Once positioned, attach Kit Pieces to wall using Hold-It Stick and Square-It Tool.
- 4 STAPLE** or screw piece 4 to wall as indicated on template placing staples (—) as shown every 1/2" to 1" or using 2 screws per piece. Repeat for piece 3.
- 5 ATTACH** straight frame (F) pieces (sold separately) to wall in same manner as needed to span between installed kits.

CORNER/FOLD LINE

