

SAFETY FIRST!
Always wear Safety Glasses and applicable
Personal Protective Equipment during installation

Time: 2-5 minutes (Average)

Skills: Measuring, Stapling/Screw-Driving, Cutting


Prep: Clear objects from wall area where kits will be installed.

Required Tools:

- Hold-It Stick Roll-On Adhesive
- Chalk Line
- Square-It Tool
- Tape measure (Fabricmate's Measure-It Repositionable Adhesive Tape Measure recommended)
- Power Driver and 1" drywall screws or Staple Gun using 1/4" crown 7/8" leg staples

EASY TO INSTALL:

- 1 CUT** template along black dotted line. If panel is free-standing also cut along blue lines so template won't show past frame edge. Fold along Corner/Fold Line.
- 2 MEASURE** to determine location of Inside Wall Corners on wall. Use Chalk Line if needed to span a large distance.
- 3 USE** Hold-It Stick to attach template to wall using it as a guide. Once positioned, attach Kit Pieces to wall using Hold-It Stick and Square-It Tool.
- 4 STAPLE** or screw piece 2 to wall as indicated on template placing staples (—) as shown every 1/2" to 1" or using 2 screws per piece. Repeat for piece 3.
- 5 ATTACH** straight frame (F) pieces (sold separately) to wall in same manner as needed to span between installed kits.

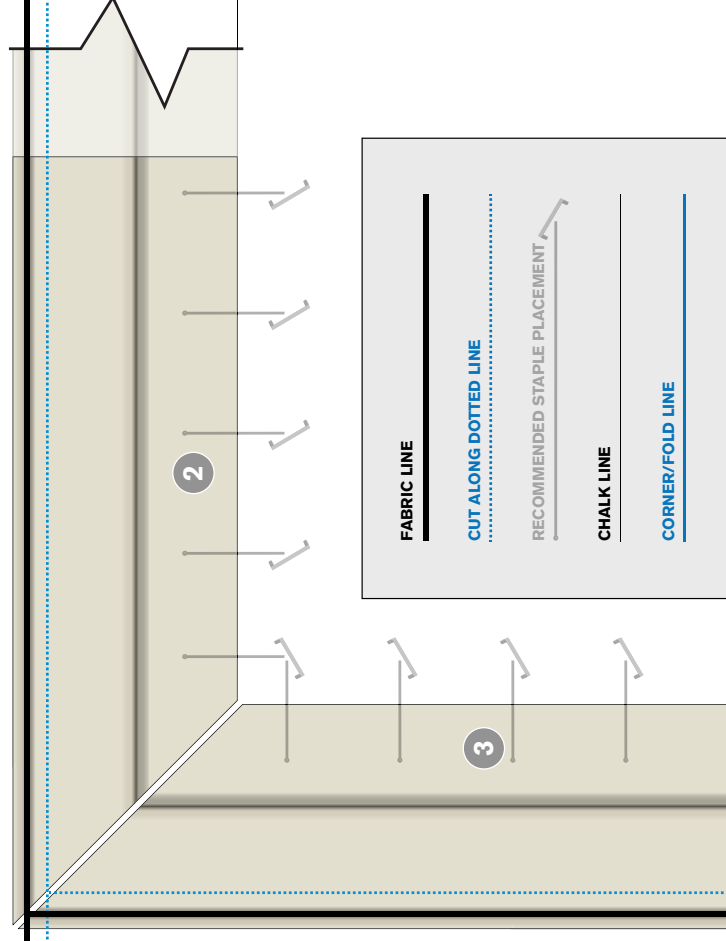



SAFETY FIRST!
Always wear Safety Glasses and applicable
Personal Protective Equipment during installation



Time: 2-5 minutes (Average)

Skills: Measuring, Stapling/Screw-Driving, Cutting

Prep: Clear objects from wall area where kits will be installed.

Required Tools:

- Hold-It Stick Roll-on Adhesive
- Chalk Line
- Square-It Tool
- Tape measure (Fabricmate's Measure-It Repositionable Adhesive Tape Measure recommended)
- Power Driver and 1" drywall screws or Staple Gun using 1/4" crown 7/8" leg staples

EASY TO INSTALL:

- 1 CUT** template along **blue** dotted lines if panel is free-standing so template won't show past frame edge. Fold along Corner/Fold Line.
- 2 MEASURE** to determine location of Inside Wall Corners on wall. Use Chalk Line if needed to span a large distance.
- 3 USE** Hold-It Stick to attach template to wall using it as a guide. Once positioned, attach Kit Pieces to wall using Hold-It Stick and Square-It Tool.
- 4 STAPLE** or screw piece 4 to wall as indicated on template placing staples (—) as shown every 1/2" to 1" or using 2 screws per piece. Repeat for piece 1.
- 5 ATTACH** straight frame (F) pieces (sold separately) to wall in same manner as needed to span between installed kits.

CORNER/FOLD LINE

