

INSTALLATION INSTRUCTIONS

Pre-Made Panels from Fabricmate can be installed on a wide variety of surfaces such as drywall, plywood, concrete, wood paneling, brick, concrete block, steel, glass, and more. Installation methods vary. The following instructions are for installation on drywall, or other semi-rigid surfaces that will accept and hold screws. Please contact us for recommendation on mounting Panels to other surfaces.

PERSONAL SAFETY IS ALWAYS THE FIRST STEP IN ANY INSTALLATION PROCEDURE. WORK SAFELY, OBTAIN ASSISTANCE AS NEEDED, AND ALWAYS WEAR SAFETY GLASSES AND PROPER PERSONAL PROTECTIVE EQUIPMENT. THUMB TACKS ARE SHARP. USE CAUTION TO AVOID CUTS AND PUNCTURES AND KEEP AWAY FROM CHILDREN. MAGNETS CAN INTERFERE WITH PACEMAKERS AND OTHER MEDICAL DEVICES. KEEP MAGNETS FAR AWAY FROM MEDICAL DEVICES TO AVOID INTERFERENCE.

TOOLS REQUIRED




Level
Drill & Drill Bit
Phillips Screwdriver
Hammer

INCLUDED


Z-Clips (2)
Drywall Screws (4)
Drywall Anchors (4)
Phillips Screw Bit (1)
Double-Sided Tape
Alcohol Wipes
Small Stick-On Level (1)
Thumb Tacks (6)
Magnets (3)

INSTALLING PRE-MADE PANELS

1. Determine the Panel's intended location on the wall. Locate the lower left corner and make a mark on the wall with your pencil (measure twice, place once).
2. Using your level to ensure accuracy, draw a light pencil line extending vertically upward from the corner mark.
3. Use the provided Double-Sided Tape on the lower portion of the Panel to adhere it to the wall. Be sure to clean the Frame and wall surface with the provided Alcohol Wipes where the Tape will be applied.
3. Use the provided Z-Clips - refer to the drawings below for placement and orientation. If there is no stud behind the drywall in the area where the Z-Clips are to be mounted, then mark the location for the screws by holding the Z-Clips in place and outlining the screw holes with a pencil. Use a drill and appropriately sized drill bit to drill a hole for the provided Drywall Anchors in the marked locations. Insert the Drywall Anchors (if necessary, lightly tap them with a hammer) and then fasten the Z-Clips to the wall using the Drywall Screws screwed into the inserted Anchors.
4. Place the Panel on the wall and slide the top Frame down on to the Z-Clips. Align the corner with the lines drawn in Step 2. Press the lower portion of the Panel firmly against the wall to adhere the tape to the wall.
5. Enjoy your new Pre-Made Panel!

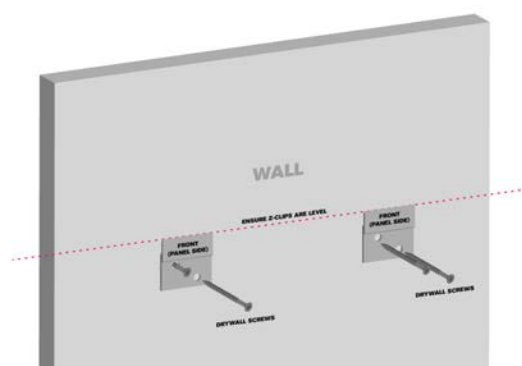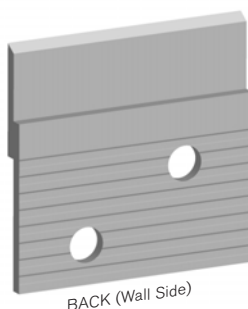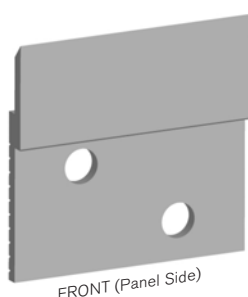

Attach the Z-Clips to the wall

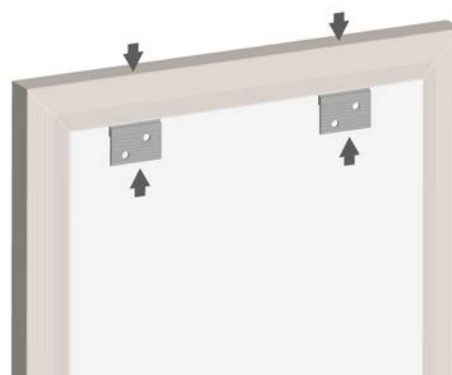

Slide the back of the panel into the small space between the Z-Clips and the wall